

# FLEXFLO<sup>®</sup>



## **MODEL A-100NV** Variable Speed Peristaltic Injector Pump Operating Manual

***Blue-White***<sup>®</sup>  
***Industries, Ltd.***

5300 Business Drive  
Huntington Beach, CA 92649  
USA

**Phone:** 714-893-8529 **FAX:** 714-894-9492

**E mail:** sales@blue-white.com or techsupport@blue-white.com

**Website:** www.blue-white.com

**TABLE OF CONTENTS**

|   |           |
|---|-----------|
| <b>1.....Introduction.....</b>                                  | <b>2</b>  |
| <b>2.....Specifications.....</b>                                | <b>3</b>  |
| <b>3.....Features.....</b>                                      | <b>3</b>  |
| <b>4.....Unpacking.....</b>                                     | <b>3</b>  |
| <b>5.....Installation.....</b>                                  | <b>4</b>  |
| <b>5.1..Mounting location.....</b>                              | <b>4</b>  |
| <b>5.2..Input power connections.....</b>                        | <b>5</b>  |
| <b>5.3..External Input signal connections.....</b>              | <b>6</b>  |
| <b>5.4..How to install the tubing and fittings.....</b>         | <b>8</b>  |
| <b>6.....How to operate the A-100N.....</b>                     | <b>9</b>  |
| <b>6.1..Description of Pump Output Adjustment Controls.....</b> | <b>9</b>  |
| <b>6.2..Mode 1 - Manually Adjusting the output.....</b>         | <b>10</b> |
| <b>6.3..Mode 2 - 4-20 mA input.....</b>                         | <b>10</b> |
| <b>6.4..Mode 3 - 0-10 VDC input.....</b>                        | <b>12</b> |
| <b>6.5..Mode 4 - Frequency/Pulse (Hz) input.....</b>            | <b>14</b> |
| <b>7.....Alarms.....</b>  | <b>16</b> |
| <b>7.1..TFD - Tube Failure Detection system.....</b>            | <b>16</b> |
| <b>7.2..FVS - Flow verification System.....</b>                 | <b>17</b> |
| <b>8.....How to maintain the pump.....</b>                      | <b>18</b> |
| <b>8.1..Routine inspection and cleaning.....</b>                | <b>18</b> |
| <b>8.2..How to clean and lubricate the Pump.....</b>            | <b>18</b> |
| <b>8.3..500 hour service warning timer.....</b>                 | <b>18</b> |
| <b>8.4..How to replace the pump tube.....</b>                   | <b>19</b> |
| <b>Replacement parts drawing.....</b>                           | <b>20</b> |
| <b>Replacement parts list.....</b>                              | <b>21</b> |
| <b>Warranty information.....</b>                                | <b>22</b> |
| <b>Authorized service centers.....</b>                          | <b>23</b> |

**1.0 Introduction**

Congratulations on purchasing the A-100NV variable speed Peristaltic Metering Pump. The A-100NV is designed to inject chemicals into piping systems. The pump has been tested by NSF International for use with 12 ½% Sodium Hypochlorite. The A-100NV is equipped with external input control circuitry which allows the pumps output to be externally controlled by either a 4-20mA input signal, a 0-10V DC input signal or a pulsed frequency input signal.

## 2.0 Specifications

|                                  |  |
|----------------------------------|--|
| <b>Maximum Working Pressure</b>  | 100 psig / 6.9 bar (most models)   |
| <b>Maximum Fluid Temperature</b> | 130° F / 54° C   |
| <b>Ambient Temperature Range</b> | 14 to 110° F / -10 to 43° C  |
| <b>Duty Cycle</b>                | Continuous   |
| <b>Adjustment Range</b>          | 5-100% of speed  |
| <b>Maximum Solids</b>            | 50% by volume  |
| <b>Maximum Viscosity</b>         | 5,000 Centipoise   |
| <b>Maximum Suction Lift</b>      | up to 30 ft. water   |
| <b>Power Requirements</b>        | 108/130Vac 60Hz 40 Watts,<br>208/250Vac 40Hz 40 Watts,<br>208/250Vac 60Hz 45 Watts |
| <b>Dimensions</b>                | 6-1/8" H x 10-1/8" W x 9" D  |
| <b>Weight</b>                    | 12 lb.   |

## 3.0 Features

- Peristaltic Pump Tube does not require valves.
- Self priming under maximum pressure. Cannot vapor lock.
- High outlet pressure capability of 100 psig (most models).
- High inlet suction lift capability of 30 feet.
- Patented Tube Failure Detection (TFD) system.
- Patented pump tube assembly design.
- Includes Flow Verification System (FVS) - sensor sold separately.
- 1 amp alarm relay (dry contact).
- Alarm and Service alert icon displays.
- Corrosion proof Valox housing.
- Tamper resistant electronic control panel cover.

## 4.0 Unpacking

Your pump package should contain the following:

- 1 - Injector pump with 2 pump tube assemblies
- 1 - suction tube strainer
- 1 - ceramic tubing weight
- 1 - 5' Length of clear PVC suction tubing
- 1 - 5' Length of opaque LLDPE discharge tubing
- 1 - Injection fitting with internal back-flow check valve
- 1 - Mounting hardware kit
- 1 - Shroud (weather proof cover see page 16)

## 5.0 Installation

**CAUTION: Proper eye and skin protection must be worn when installing and servicing the pump.**

*Note: All diagrams are strictly for guideline purposes only. Always consult an expert before installing the pump into specialized systems. The pump should be serviced by qualified persons only.*


### 5.1 Mounting Location

Choose an area located near the chemical supply tank, chemical injection point and electrical supply. Although the pump is designed to withstand outdoor conditions, a cool, dry, well ventilated location is recommended. Install the pump where it can be easily serviced.


- Mount the pump to a secure surface or wall using the enclosed hardware. Wall mount to a solid surface only. Mounting to drywall with anchors is not recommended.
- Mount the pump close to the injection point. Keep the outlet (discharge) tubing as short as possible. Longer tubing increases the back pressure at the pump tube.
- Your solution tank should be sturdy. Keep the tank covered to reduce fumes. Do not mount the pump directly over your tank. Chemical fumes may damage the unit. Mount the pump off to the side or at a lower level than the chemical container.
- Mounting the pump lower than the chemical container will gravity feed the chemical into the pump. This “flooded suction” installation will reduce output error due to increased suction lift. You must install a shut-off valve, pinch clamp or other means to halt the gravity feed to the pump during servicing.
- Be sure your installation does not constitute a cross connection with the drinking water supply. Check your local plumbing codes.
- Be sure to install a back-flow prevention check valve.
- An anti-syphon valve is not required. syphoning cannot occur.

#### INJECTOR MOUNTING

##### Floor Mount

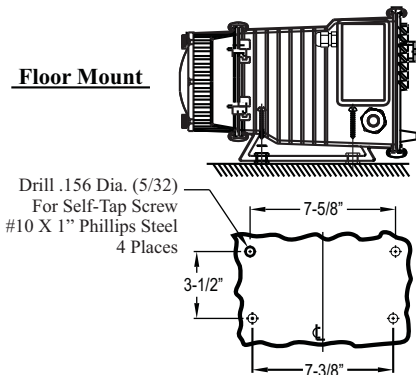


##### Wall Mount

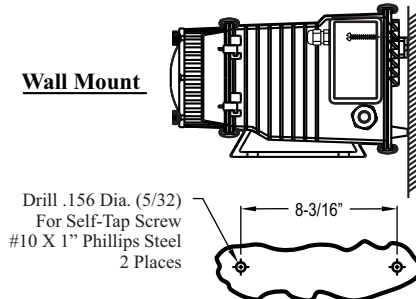

*Note: For wall-mounting, drill & thread into solid wood only.*

TYPICAL INSTALLATION


Injection / Check valve with 1/4" and 1/2" male pipe threads. Mount in upward position to prevent trapped gasses in the injection fitting.

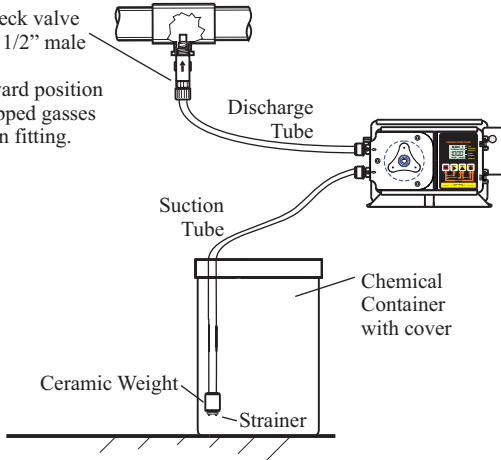

**FLEXFLO**

Wall or shelf mount away from the top of the solution tank. Chemical fumes can damage the unit.

PARTS LOCATOR DRAWING

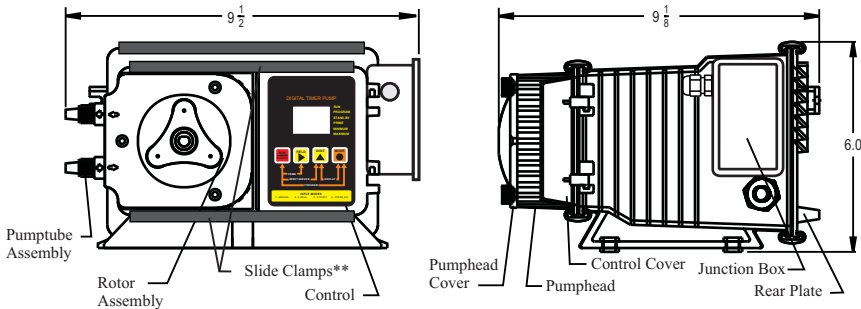

5.2 Input Power Connections

**WARNING: Risk of electric shock.**

- Be certain to connect the pump to the proper supply voltage. Using the incorrect voltage will damage the pump and may result in injury. The voltage requirement is printed on the pump serial label.
- Jumper pins on the circuit board are factory preset for the correct voltage. See page 7 Circuit Board Connections diagram for details.
- The pump is supplied with a ground wire conductor and a grounding type attachment plug (power cord). To reduce the risk of electric shock, be certain that the power cord is connected only to a properly grounded, grounding type receptacle.

*Note: When in doubt regarding your electrical installation, contact a licensed electrician.*

**5.3 External Input Signal Connections**

The pump will accept any one of three different types of external input signals; 4-20 mA , 0-10 VDC, or pulse frequency (500 Hz maximum). The 4-20mA and 0-10 VDC loops must be powered. Two types of frequency inputs, AC sine waves (magnetic coils type outputs) and Digital Square waves (Hall Effect signals, contact closures), are acceptable. A jumper plug located on the circuit board is factory pre-set for AC sine wave signals, the jumper must be re-positioned when digital square wave signals are being used. See page 7, “Hz input jumper settings”

All wiring connections are to be made inside of the junction box located on the side of the pump. A liquid-tite connector is supplied and should be used for the external signal cable. The signal input wires are color coded to the type of signal being used.

**SIGNAL INPUT/OUTPUT WIRE COLOR CODES**


| INPUT TYPE   | WIRE COLOR CODE  |
|--|--|
| 4-20 mA (loop resistance = 250 ohm)  | <b>BLUE (+) (non-powered) &amp; BLACK (-)</b>  |
| 0-10 VDC   | <b>ORANGE (+) (non-powered) &amp; BLACK (-)</b>  |
| AC sine wave, TTL, CMOS  | <b>WHITE (+) &amp; BLACK (-)</b>   |
| CONTACT (10v @ 2 mA max)<br>HALL EFFECT, NPN   | <b>RED (+) &amp; WHITE (-)</b>   |
| ALARM RELAY<br>connect 2-conductor plug to either normally open (NO) (factory default) or normally closed (NC) side of receptacle.<br>1 AMP MAX @ 125VAC (24VDC) | <b>PURPLE &amp; PURPLE</b>   |
| FLOW VERIFICATION SENSOR   | <b>RED/WHITE (+ 20VDC)<br/>BLACK (-)<br/>YELLOW (signal)</b>                             |
| MOTOR ON SIGNAL<br>6-30V DC open collector output closed while motor is energized  | <b>BROWN (+) &amp; BLACK (-)<br/>pull-up resistor required - see schematic next page</b> |

**PADDLEWHEEL SENSOR SIGNAL INPUT WIRING**


| PADDLEWHEEL SENSOR TYPE | PADDLEWHEEL SENSOR WIRE COLOR CODE             | PUMP INPUT WIRE COLOR CODE                            |
|-------------------------|--|---|
| HALL EFFECT SENSOR      | <b>RED (+)<br/>BLACK (-)<br/>BARE (signal)</b> | <b>RED (+ 20VDC)<br/>BLACK (-)<br/>WHITE (signal)</b> |
| AC SINE WAVE SENSOR     | <b>RED (+)<br/>BLACK (-)</b>                   | <b>WHITE (+)<br/>BLACK (-)</b>                        |

**OPEN COLLECTOR MOTOR ON OUTPUT SCHEMATICS**


**OUTPUT SCHEMATIC**

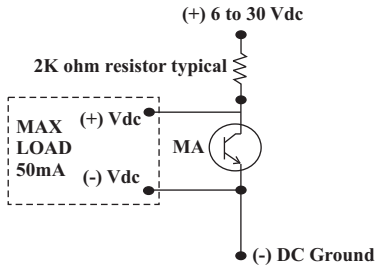

**TYPICAL EXAMPLE**

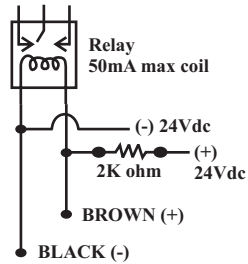


**CIRCUIT BOARD CONNECTIONS**

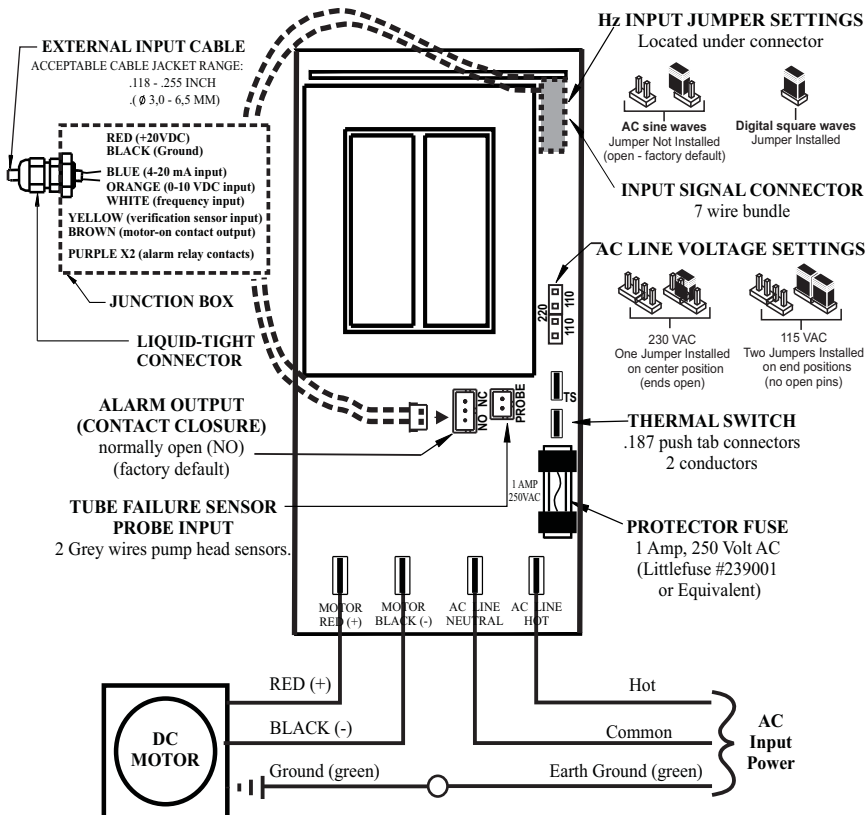


### 5.4 How To Install the Tubing and Fittings

**CAUTION: Proper eye and skin protection must be worn when installing and servicing the pump.**



- **Inlet Tubing** - Locate the inlet fitting of the Pump Tube. Remove the tube nut. Push the clear PVC suction tubing onto the compression barb of the fitting. Use the tube nut to secure the tube. Hand tighten only.
- **Strainer** - Trim the inlet end of the suction tubing so that the strainer will rest approximately two inches from the bottom of the solution tank. This will prevent sediment from clogging the strainer. Slip the ceramic weight over the end of the suction tube. Press the strainer into the end of the tube. Secure the ceramic weight to the strainer. Drop the strainer into the solution tank.
- **Outlet Tubing** - Locate the outlet fitting of the Pump Tube. Remove the tube nut. Push the opaque outlet (discharge) tubing onto the compression barb of the fitting. Use the tube nut to secure the tube. Hand tighten only.

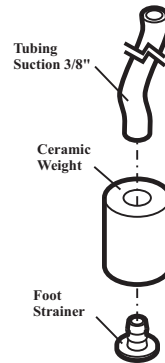

**Keep outlet tube as short as possible.**

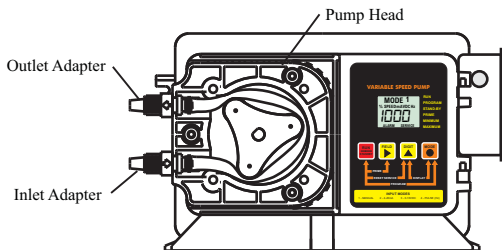

- **Injection/Check Valve Fitting Installation** - The Injection/Check valve fitting is designed to install directly into either 1/4" or 1/2" female pipe threads. This fitting will require periodic cleaning, especially when injecting fluids that calcify such as sodium hypochlorite. See section 7.0. Install the Injection/Check valve directly into the piping system. To prevent trapped gasses, install the fitting in an upward direction. Use PTFE thread sealing tape on the pipe threads. Push the opaque outlet (discharge) tubing onto the compression barb of the Injection/Check valve fitting. Use the tube nut to secure the tube. Hand tighten only.

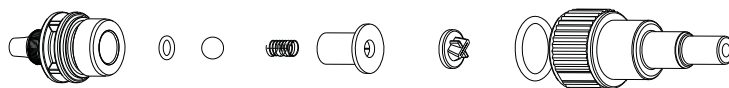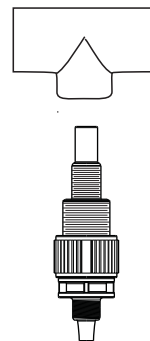



## 6.0 How To Operate The A-100NV

### 6.1 Description of Pump Output

**Adjustment Controls** - Open the control panel door by sliding the upper and lower slide clamps to the left.

- **RUN/STANDBY** Button -

- ❖ Press to start and stop the pump. The **ARROW** next to the word **RUN** will light when in the run mode. The **ARROW** next to the word **STAND-BY** will blink when in the stand-by mode.

- ❖ Press to clear **ALARM**.

- ❖ When pressed with the **FIELD** Button, initiates a 99 second prime cycle which temporarily overrides the mode setting and runs the pump motor at 100% speed. The **ARROW** next to the word **PRIME** will blink.

- ❖ When pressed with the **DIGIT** button, resets the 500 hour service warning timer to zero.

- ❖ When pressed with the **MODE** button, initiates the programming mode. The **ARROW** next to the word **PROGRAM** will blink.

- **FIELD** Button -

- ❖ In the programming mode, selects the digit to be changed.

- ❖ When pressed with the **DIGIT** button, initiates the Flow Verification Sensor feature and allows programming the alarm delay from 1-256 seconds.

- **DIGIT** Button -

- ❖ In the programming mode, increases the selected digit.

- ❖ When pressed with the **MODE** Button, toggles the display from % motor speed to input signal value.

- **MODE** Button -



- ❖ Used to select one of four operating modes.

**Mode 1** - Manual Adjustment (external input disabled)

**Mode 2** - 4-20mA input

**Mode 3** - 0-10VDC input

**Mode 4** - Frequency (Hz) input

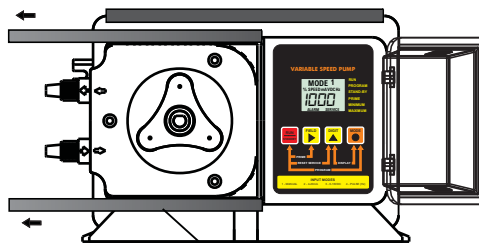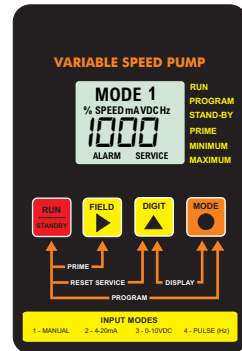


SLIDE CLAMP

## 6.2 OPERATING MODE 1 - Output adjusted manually -

In this mode, the pump’s motor speed is adjusted manually using the front panel touch pad. The motor speed can be adjusted from 5-100%. To adjust the speed:

- ❖ **Set the pump for mode 1.** Press the MODE button until **MODE 1** is shown on the LCD display. The **%SPEED** icon will light. The large **3-DIGIT LCD** will indicate the currently programmed percentage of speed.
  - ❖ **Enter the programming mode.** At the same time, press the RUN/STANDBY button and the MODE button. A blinking **ARROW** will point to the word **PROGRAM** indicating the program mode has been activated.
  - ❖ Press the FIELD button to select the digit to program. The digit will blink when selected.
  - ❖ Press the DIGIT button to change the selected digit.
  - ❖ Repeat until all digits are programmed.
  - ❖ To exit the programming mode, press the RUN/STANDBY button and the MODE button at the same time. The arrow next to the word **PROGRAM** will disappear.
- ✓ **NOTE:** If while in the program mode no buttons are pressed within 20 seconds, the circuitry will automatically return to the run mode, without saving changes

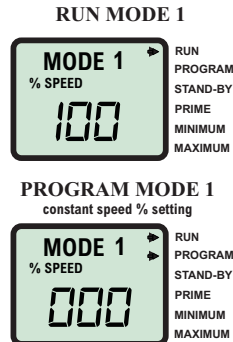


## 6.3 OPERATING MODE 2 - Output adjusted by 4-20 mA input signal -

In this mode, the pump’s motor speed is adjusted automatically based on the value of the 4-20 mA input signal. Any motor speed can be assigned to either the minimum or maximum milliamp input values.

However, **the programmed minimum mA value must be less than the programmed maximum mA value.** The **ALARM** and **SERVICE** icons will blink if the programming is in error. To assign the minimum and maximum motor speed and the minimum and maximum mA input signal values:


- ❖ **Set the pump for mode 2.** Press the MODE button until **MODE 2** is shown on the LCD display. The **%SPEED** or **mA** icon will light depending on the current display setting. The large **3-DIGIT LCD** will indicate the current motor speed or the current mA

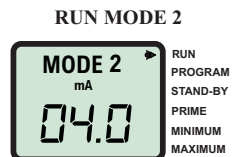


input value.

- ❖ **Enter the programming mode.** At the same time, press the RUN/STANDBY and MODE buttons. A blinking **ARROW** will point to the word **PROGRAM** indicating the program mode is activated. A blinking **ARROW** will point to the word **MINIMUM** indicating the minimum value is ready to be programmed. The % **SPEED** icon will blink indicating the percentage of speed is ready to be programmed.
- ❖ **Enter the motor speed at the minimum mA input signal value.** Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The % **SPEED** icon will stop blinking and the **mA** icon will blink indicating the minimum mA value is ready to be programmed. The currently programmed minimum value is shown on the **3-DIGIT LCD**.
- ❖ **Enter the minimum mA input signal value.** Note: this value must be less than the maximum mA input signal value. Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The **Ma** icon will stop blinking and the % **SPEED** icon will blink. The **ARROW** next to the word **MAXIMUM** will blink indicating the maximum value is ready to be programmed. The currently programmed maximum motor speed value is shown on the **3-DIGIT LCD**.
- ❖ **Enter the motor speed at the maximum mA input signal value.** Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The % **SPEED** icon will stop blinking and the **mA** icon will blink indicating the maximum mA value is ready to be programmed. The currently programmed maximum value is shown on the **3-DIGIT LCD**.
- ❖ **Enter the maximum mA input signal value.** Note: this value must be greater than the minimum mA input signal value. Press the FIELD button to select the digit to program. The digit will blink when selected..
- ❖ Press the DIGIT button to change the selected digit.


PROGRAM MODE 2  
% speed at the minimum input

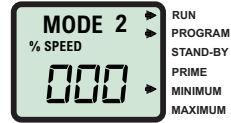


PROGRAM MODE 2  
minimum input value

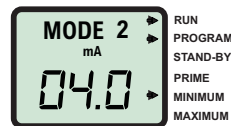

PROGRAM MODE 2  
% speed at the maximum input

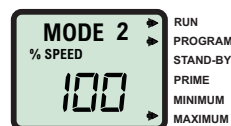


PROGRAM MODE 2  
maximum input value

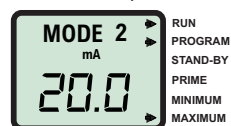

- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. Programming is complete.
- ❖ To exit the programming mode, press the RUN/STANDBY button and the MODE button at the same time. The PROGRAM arrow will disappear.



MODE 2 PROGRAMMING EXAMPLES

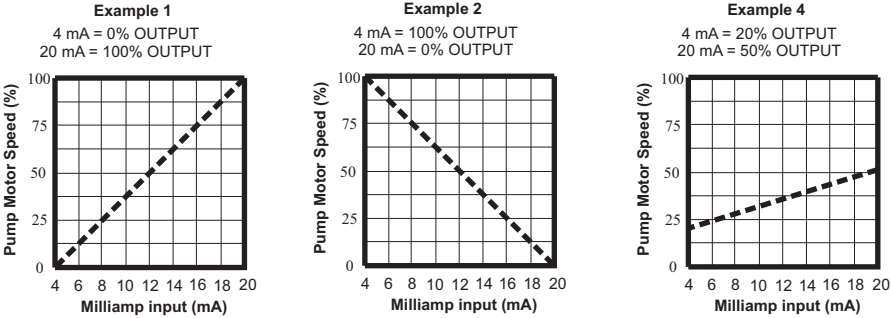



6.4 OPERATING MODE 3 - Output adjusted by 0-10VDC input signal -

In this mode, the pump’s motor speed is adjusted automatically based on the value of the 0-10VDC input signal. Any motor speed can be assigned to either the minimum or maximum DC input signal values. However, **the programmed minimum VDC value must be less than the programmed maximum VDC value**. The **ALARM** and **SERVICE** icons will blink if the programming is in error. To assign the minimum and maximum motor speed and the minimum and maximum VDC input signal values:

- ❖ **Set the pump for mode 3.** Press the MODE button until **MODE 3** is shown on the LCD display. The **% SPEED** or **VDC** icon will light depending on the current display setting. The large **3-DIGIT LCD** will indicate the current motor speed or the VDC input value.
- ❖ **Enter the programming mode.** At the same time, press the RUN/STANDBY and MODE buttons. A blinking **ARROW** will point to the word **PROGRAM** indicating the program mode is activated. A blinking **ARROW** will point to the word **MINIMUM** indicating the minimum value is ready to be programmed. The **% SPEED** icon will blink indicating the percentage of speed is ready to be programmed.

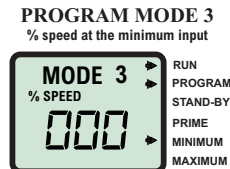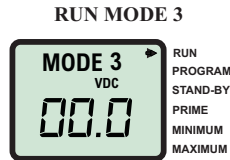

- ❖ **Enter the motor speed at the minimum VDC input signal value.** Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The % **SPEED** icon will stop blinking and the **VDC** icon will blink indicating the minimum VDC value is ready to be programmed. The currently programmed minimum value is shown on the **3-DIGIT LCD**.
- ❖ **Enter the minimum VDC input signal value.** Note: this value must be less than the maximum VDC input signal value. Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The **VDC** icon will stop blinking and the % **SPEED** icon will blink. The **ARROW** next to the word **MAXIMUM** will blink indicating the maximum value is ready to be programmed. The currently programmed maximum motor speed value is shown on the **3-DIGIT LCD**.
- ❖ **Enter the motor speed at the maximum VDC input signal value.** Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The % **SPEED** icon will stop blinking and the **VDC** icon will blink indicating the maximum VDC value is ready to be programmed. The currently programmed maximum value is shown on the **3-DIGIT LCD**.
- ❖ **Enter the maximum VDC input signal value.** Note: this value must be greater than the minimum VDC input signal value. Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. Programming is complete.
- ❖ To exit the programming mode, press the RUN/STANDBY button and the MODE button at the same time. The **PROGRAM** arrow will disappear.


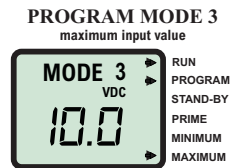
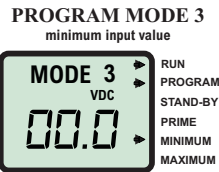


## 6.5 OPERATING MODE 4 - Output adjusted by frequency (Hz) input signal -

In this mode, the pump's motor speed is adjusted automatically based on the frequency (Hz) of the input signal (500 Hz max). Any motor speed can be assigned to either the minimum or maximum Hz input signals. However, **the programmed minimum Hz value must be less than the programmed maximum Hz value**. The **ALARM** and **SERVICE** icons will blink if the programming is in error. To assign the minimum and maximum motor speed and the minimum and maximum Hz input signal values:

- ❖ **Set the pump for mode 4.** Press the MODE button until **MODE 4** is shown on the LCD display. The **% SPEED** or **Hz** icon will light depending on the current display setting. The large **3-DIGIT LCD** will indicate the current motor speed or the Hz input value.
- ❖ **Enter the programming mode.** At the same time, press the RUN/STANDBY and MODE buttons. A blinking **ARROW** will point to the word **PROGRAM** indicating the program mode is activated. A blinking **ARROW** will point to the word **MINIMUM** indicating the minimum value is ready to be programmed. The **% SPEED** icon will blink indicating the percentage of speed is ready to be programmed.
- ❖ **Enter the motor speed at the minimum Hz input signal value.** Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The **% SPEED** icon will stop blinking and the **Hz** icon will blink indicating the minimum Hz value is ready to be programmed. The currently programmed minimum value is shown on the **3-DIGIT LCD**.
- ❖ **Enter the minimum Hz input signal value (to the nearest 10 Hz).** Note: this value must be less than the maximum Hz input signal value. Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The **Hz** icon will stop blinking and the **% SPEED** icon will blink. The **ARROW** next to the word **MAXIMUM** will blink indicating the maximum value is ready to be programmed. The


RUN MODE 4

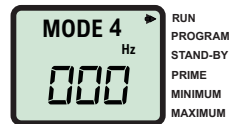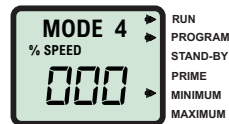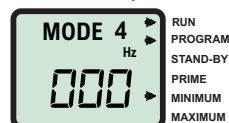PROGRAM MODE 4  
% speed at the minimum inputPROGRAM MODE 4  
minimum input value


currently programmed maximum motor speed value is shown on the 3-DIGIT LCD.

- ❖ **Enter the motor speed at the maximum Hz input signal value.** Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. The % *SPEED* icon will stop blinking and the *Hz* icon will blink indicating the maximum Hz value is ready to be programmed. The currently programmed maximum value is shown on the 3-DIGIT LCD.
- ❖ **Enter the maximum Hz input signal value (to the nearest 10 Hz).** Note: this value must be greater than the minimum Hz input signal value. Press the FIELD button to select the digit to program. The digit will blink when selected.
- ❖ Press the DIGIT button to change the selected digit.
- ❖ Repeat until all digits are programmed.
- ❖ Press the mode button. Programming is complete.
- ❖ To exit the programming mode, press the RUN/STANDBY button and the MODE button at the same time. The **PROGRAM** arrow will disappear.


PROGRAM MODE 4  
% speed at the maximum input

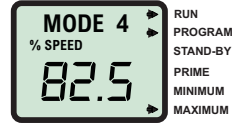

PROGRAM MODE 4  
minimum input value

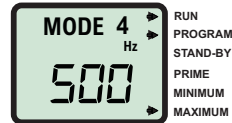


### MODE 4 PROGRAMMING EXAMPLES

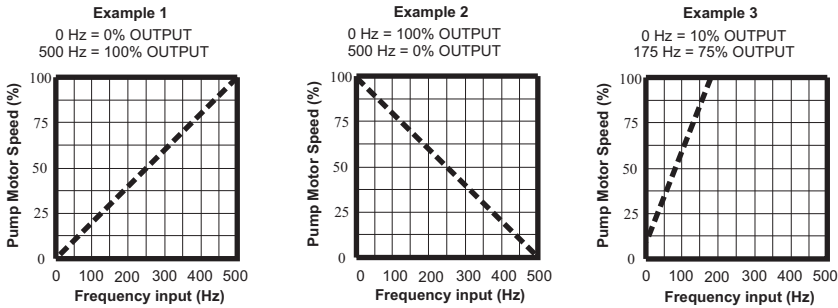

### MOTOR SPEED ADJUSTMENT RESOLUTION


$$\text{MOTOR SPEED RESOLUTION} = \frac{10}{\text{MAXIMUM INPUT FREQUENCY}}$$

NOTE: Max Hz > 25 Hz is recommended

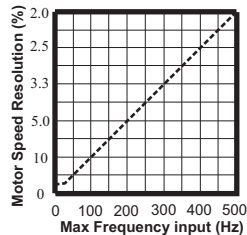

**7.0 ALARMS -**



**7.1 TFD - Tube Failure Detection system** - The A-100NV is equipped with a *Tube Failure Detection System* which is designed to stop the pump and provide a contact closure output in the event the pump tube should rupture and chemical enters the pump head. This patented system is capable of detecting the presence of a large number of chemicals including Sodium Hypochlorite (Chlorine), Hydrochloric (muriatic) Acid, Sodium Hydroxide, and many others. The system will not be triggered by water (rain, condensation, etc.) or silicone oil (roller and tubing lubricant). If the system has detected chemical, the pump tube must be replaced and the pump head and roller assembly must be thoroughly cleaned. Press the **RUN/STAND-BY and FIELD** buttons at the same time (prime mode), to remove the pump tube. Thoroughly clean the pump head and roller assembly. Press the **RUN/STAND-BY** button to reset the system.

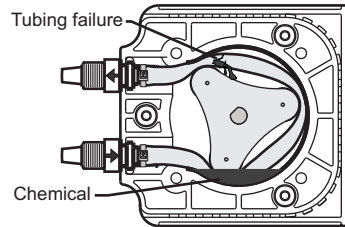

**Confirm Chemical Detection** - To determine if your chemical will be detected by the system, remove the pump tube and roller assembly. Place a small amount of the chemical in the bottom of the pump head - just enough to cover the sensors. Turn on the pump. If the TFD system detects the chemical, the pump will stop after a five second confirmation period and the **ALARM** icon will light on the display. If the TFD system does not detect the chemical, the pump will continue to run after the confirmation period. Carefully clean the chemical out of the pump head being sure to remove all traces of chemical from the sensor probes. Press the **RUN/STAND-BY** button to clear the alarm condition and restart the pump.

**Contact Closure Alarm Output** - A contact closure output (relay) is provided with the TFD system. The relay can be configured for normally open (factory default) or normally closed operation by properly positioning the connector plug on the circuit board (see page 7).

This **Shroud** is designed to weather proof this Peristaltic Pump. If the pump is wall mounted the shroud is not necessary and will still be considered weather proof.

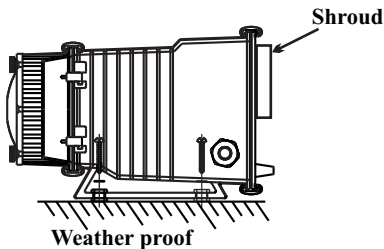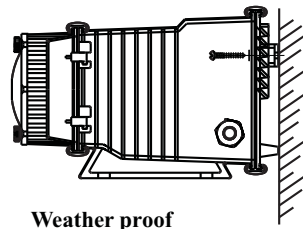**Floor Mount****Wall Mount**



## 7.2 FVS - Flow Verification System - (sensor sold separately)

The A-100NV is equipped with a *Flow Verification System* which is designed to stop the pump and provide a contact closure output in the event the sensor does not detect chemical during pump operation. This could indicate a clogged injection fitting, empty chemical solution tank, worn pump tube, loose tubing connection, etc.

To allow the pump to clear any gasses that may have accumulated during stopper operation (such as with chlorine), an alarm delay time value from 1-256 seconds must be programmed. Press the FIELD and DIGIT buttons at the same time to enter the delay value. **Note: an alarm delay value of 000 seconds disables the FVS system.**


The pump will stop, and the alarm mode activated, if no pulses are received by the pump and the alarm delay time period has ended. Press the STANDBY button twice to clear the alarm and restart the pump. The Flow Verification Sensor is sold as an optional accessory.

**Confirm the FVS flow range** - The Flow Verification Sensor (FVS) will only function within its operating range. Sensor model FV-100-6V has an operating range of 30-300 ml/min (1-10 oz/min). If the pump's output is less than 30 ml/min (0.5 ml/sec), the sensor will not detect chemical and a signal will not be sent to the pump.

| SENSOR MODEL NUMBER | OPERATING FLOW RANGE (ml/min) |
|---------------------|-------------------------------|
| FV-100-6V           | 30-300                        |
| FV-200-6V           | 100-1000                      |
| FV-300-6V           | 200-2000                      |
| FV-400-6V           | 300-3000                      |
| FV-500-6V           | 500-5000                      |
| FV-600-6V           | 700-7000                      |

**Install the FVS Flow Sensor** - The Flow Verification Sensor (FVS) should be installed on the inlet (suction) side of the pump tube. The sensor includes a PVC tubing insert, located inside the sensor's female thread connection, that is designed to seal the sensor onto the pump tube inlet adapter. Thread the sensor onto the pump tube until the tubing insert is snug against the pump tube inlet fitting - do not over-tighten.

Connect the red/white, black, and white wires from the sensor to the red, black, and yellow wires located in the pump's junction box. See page 7.

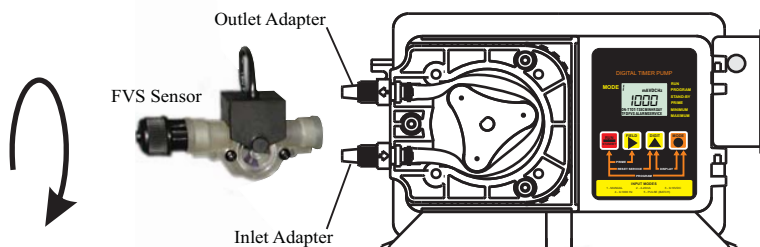

**Contact Closure Alarm Output** - A contact closure output (relay) is provided with the FVS system. The relay can be configured for normally open (factory default) or normally closed operation by properly positioning the connector plug on the circuit board (see page 7).

## 8.0 How to Maintain the Pump

**CAUTION: Proper eye and skin protection must be worn when installing and servicing the pump.**

### 8.1 Routine Inspection and Maintenance

The pump requires very little maintenance. However, the pump and all accessories should be checked weekly. This is especially important when pumping chemicals. Inspect all components for signs of leaking, swelling, cracking, discoloration or corrosion. Replace worn or damaged components immediately.

Cracking, crazing, discoloration and the like during the first week of operation are signs of severe chemical attack. If this occurs, immediately remove the chemical from the pump. Determine which parts are being attacked and replace them with parts that have been manufactured using more suitable materials. The manufacturer does not assume responsibility for damage to the pump that has been caused by chemical attack.

### 8.2 How to Clean and Lubricate the Pump

The pump will require occasional cleaning and lubricating. The amount will depend on the severity of service.

- ☑ When changing the pump tube assembly, the pump head chamber, roller assembly and pump head cover should be wiped free of any dirt and debris.
- ☑ The pump head cover bearing may require grease periodically. Apply a small amount of grease (Aeroshell aviation grease #5 or equivalent) when necessary.
- ☑ Although not necessary, 100% silicon lubrication may be used on the roller assembly and tube assembly.
- ☑ Periodically clean the injection/check valve assembly, especially when injecting fluids that calcify such as sodium hypochlorite. These lime deposits and other build ups can clog the fitting, increase the back pressure and interfere with the check valve operation.
- ☑ Periodically clean the suction strainer.
- ☑ Periodically inspect the air vents located under the motor compartment and on the rear panel. Clean if necessary.

### 8.3 500 Hour Service Warning Timer


The A-100NV is equipped with a tube life warning timer. After approximately 500 hours of accumulated running time, the **SERVICE** icon will light. This is a reminder that the pump tube is nearing its minimum life expectancy and should be replaced. *Your actual tube life will depend on many factors such as the chemical used, back pressure, temperature, viscosity, and motor RPM.*

## 8.4 How to Replace the Pump Tube

The pump tube assembly will eventually break if not replaced. The tube has been designed for a minimum service life of 500 hours. However, the life of the tube is affected by many factors such as the type of chemical being pumped, the amount of back pressure, the motor RPM, temperature and others. The pump tube assembly must be inspected and replaced regularly.

**Remove the Old Pump Tube** - The pump roller assembly spins in a counter clockwise direction. The pump head inlet (suction) side is located at the bottom of the pump and the outlet (discharge) is located at the top of the pump head.


- Release any pressure that may be in the discharge tubing.
- Disconnect the suction and discharge tubes from the pump tube.
- Remove the pump head cover.
- With the pump running, pull the inlet fitting out of the pumphead. Guide the tube counter clockwise away from the rollers. Pull the outlet fitting out of the pump head.

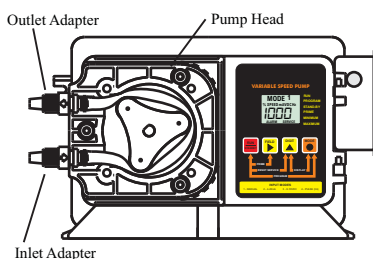


**Install the New Pump Tube** - Be sure the pump head chamber is clean and free of any debris.

Remove and inspect the roller assembly. Be sure the rollers spin freely. If required, apply a small amount of grease to the pump head cover bearing.

- With the pump running, insert the inlet (suction) side of the Pump Tube fitting into the pump head.
- **Carefully** guide the Pump Tube into the pump head. Stretch the tube slightly and insert the outlet (discharge) fitting into the upper retaining slot in the pump head.
- Place the clear cover on the pump head and secure with three screws.

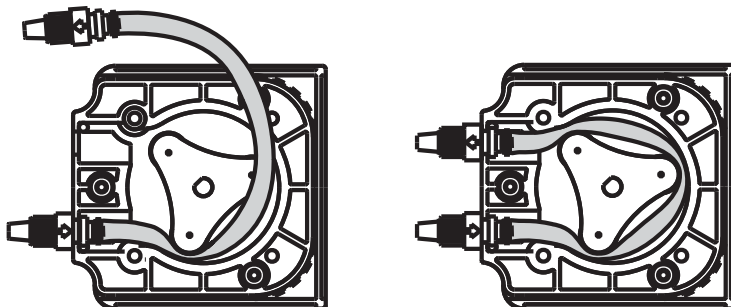

REPLACEMENT PARTS DRAWING

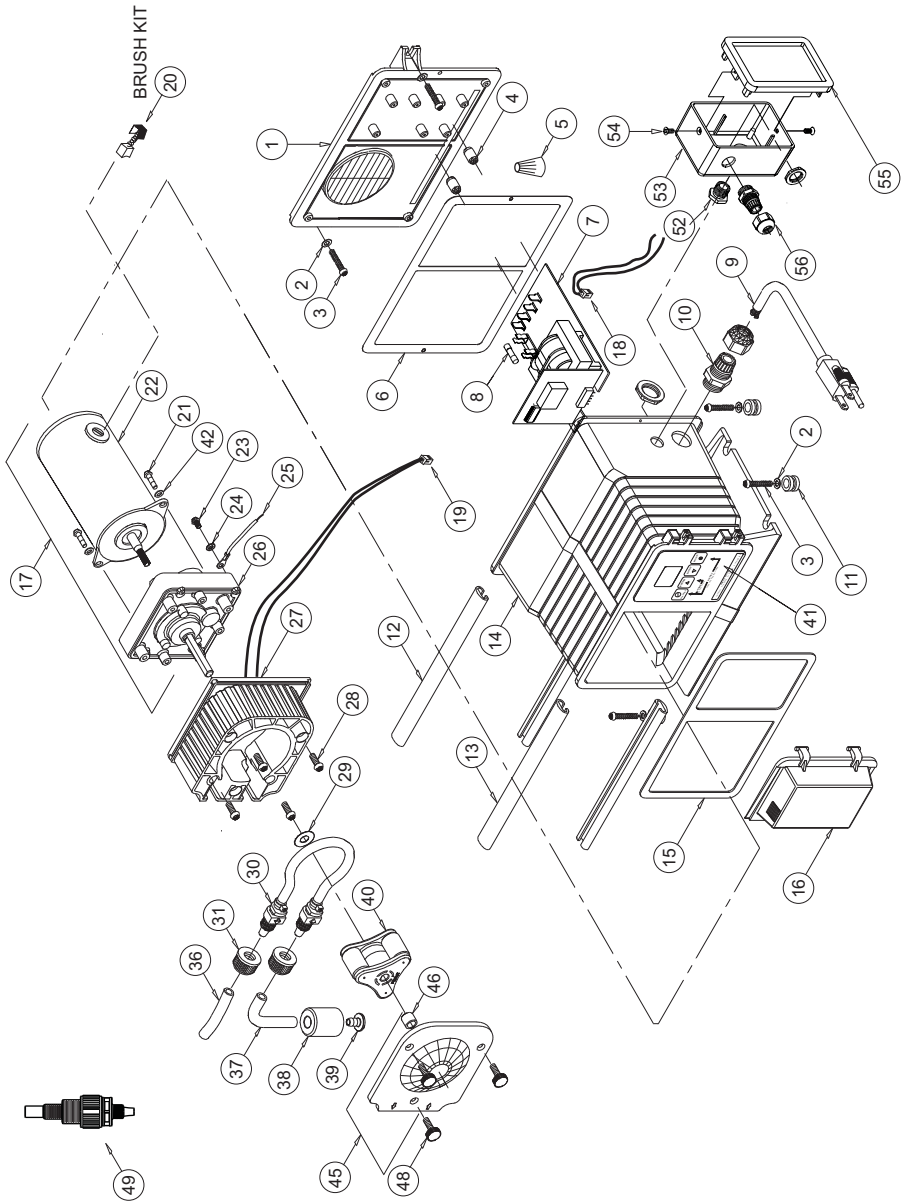

## REPLACEMENT PARTS LIST

| Item | Part No      | Description                               | Qty | Item | Part No   | Description                                  | Qty |
|------|--------------|---|-----|------|-----------|--|-----|
| 1    | 71000-489    | Enclosure Back Plate With Gasket, Valox   | 1   |      | A-008-2   | Gearbox, 30 Rpm                              | 1   |
| 2    | 90011-094    | Washer, Mounting, #10 Stainless           | 2   |      | A-008-3   | Gearbox, 45 Rpm                              | 1   |
| 3    | 90011-091    | Mounting Screw, #10 X 1.0" Phillips Steel | 4   |      | A-008-4   | Gearbox, 60 Rpm                              | 1   |
| 4    | 76001-001    | Tubing Spacer A-100NV digital             | 2   |      | A-008-5   | Gearbox, 125 Rpm                             | 1   |
| 5    | 90010-036    | Wire Nut, Blue                            | 1   | 27   | 71000-488 | Pumphead, A-100NV w/TFD sensors              | 1   |
| 6    | 90006-580    | Gasket, Enclosure Back Plate              | 1   | 28   | C-324N    | Screw, Pumphead, 10-32 X .50 Phil Pan Black  | 4   |
| 7    | A-023N-V-115 | Circuit board A-100NV 115V                | 1   | 29   | A-031     | Spacer, Rotor                                | 1   |
|      | A-023N-V-230 | Circuit board A-100NV 220V/230V           | 1   | 30   | A-002N-1T | Pump Tube, .25 O.D., Tygothane               | 1   |
| 8    | 90010-235    | Fuse, A-100NV Circuit Board, 1A 250VAC    | 1   |      | A-002N-2T | Pump Tube, .37 O.D., Tygothane               | 1   |
| 9    | 71000-175    | Power Cord, 115v60hz, Digital Models      | 1   |      | A-002N-3T | Pump Tube, .43 O.D., Tygothane               | 1   |
|      | 71000-176    | Power Cord, 220v50hz, Digital Models      | 1   |      | A-002N-4T | Pump Tube, .25 O.D., Norprene                | 1   |
|      | 71000-177    | Power Cord, 230v60hz, Digital Models      | 1   |      | A-002N-6T | Pump Tube, .37 O.D., Norprene                | 1   |
| 10   | 70000-589    | Cord Inlet Bushing                        | 1   |      | A-002N-7T | Pump Tube, .43 O.D., Norprene                | 1   |
| 11   | 90003-559    | Mounting Feet, Rubber                     | 4   | 31   | C-330-6   | Nut, Tube Compression Type, .37 O.D. Tubing  | 2   |
| 12   | 76001-000    | Slide Clamp, Enclosure Rear               | 1   | 36   | C-335-6   | Tubing, Outlet, .37 O.D. X 5ft, Polyethylene | 1   |
| 13   | 76000-999    | Slide Clamp, Enclosure Front              | 1   | 37   | C-334-6   | Tubing, Inlet, .37 O.D. X 5ft, Clear PVC     | 1   |
| 14   | 76001-253    | Enclosure A-100NV                         | 1   | 38   | C-346     | Weight, Inlet Tubing, Ceramic                | 1   |
| 15   | 90006-579    | Gasket, Enclosure Front                   | 1   | 39   | C-342-2   | Strainer, Inlet Tube, Polypropylene          | 1   |
| 16   | 90002-191    | Door, Electronic Controls Cover           | 1   | 40   | 71000-159 | Roller Assembly -4, -6 tubes                 | 1   |
| 17   | 70002-250    | Gearmotor, 14 Rpm, 24V DC                 | 1   |      | 71000-350 | Roller Assembly -1, -2, -3, -7 tubes         | 1   |
|      | 70002-251    | Gearmotor, 30 Rpm, 24V DC                 | 1   | 41   | 90012-245 | Label, A-100NV front panel controls          | 1   |
|      | 70002-252    | Gearmotor, 45 Rpm, 24V DC                 | 1   | 42   | 90011-074 | Washer, #8 splitlock                         | 2   |
|      | 70002-253    | Gearmotor, 60 Rpm, 24V DC                 | 1   | 45   | 71000-156 | Cover, Pumphead With Sleeve Bearing          | 1   |
|      | 70002-254    | Gearmotor, 125 Rpm, 24V DC                | 1   | 46   | 76001-003 | Bearing, Sleeve, Pumphead Cover              | 1   |
| 18   | 90010-246    | Wire set w/plug, Alarm relay              | 1   | 48   | 90011-160 | Screw, Pumphead Cover, 8-32 X .62 Cap        | 3   |
| 19   | 90010-245    | Wire set w/plug, TFD sensor               | 1   | 49   | A-014N-6A | Inj/Valve Assy, .5-.25 MPT X .37OD Tube      | 1   |
| N/S  | 90010-247    | Wire set w/plug, input signals            | 1   | 52   | 90007-515 | Bushing, Junction Box Connector, Alum.       | 1   |
| 20   | C-1814N-4    | Motor Brush kit (2 ea), 24V DC            | 1   | 53   | 76001-254 | Junction Box A-100NV                         | 1   |
| 21   | 90011-023    | Screw, Motor, 8-32 x .50                  | 2   | 54   | 90011-129 | Screw, Cover, 6-32 X .25 Phil Pan SS Black   | 2   |
| 22   | 90010-244    | Motor, 24V DC                             | 1   | 55   | 71000-133 | Cover, Junction Box with Gasket and Label    | 1   |
| 23   | 90011-024    | Screw, Green Ground, 8-32 x .25           | 1   | 56   | 90008-199 | Connector Liquid-tight                       | 1   |
| 24   | 90011-078    | Washer, Ground Screw, #8 Star             | 1   |      |           |  |     |
| 25   | 90010-222    | Wire, Motor ground, Digital Timers, Green | 1   |      |           |  |     |
| 26   | A-008-1      | Gearbox, 14 Rpm                           | 1   |      |           |  |     |

**AUTHORIZED SERVICE CENTERS****ARKANSAS**

**BT Environmental, Inc**  
Bill Thomason  
225 Castleberry Street  
Hot Springs, AR 71901  
501-624-3837

**CALIFORNIA****(NORTHERN)**

**Howard E. Hutching  
company**

**(Repair Center)**  
7190 Penryn Plaza  
Penryn, CA 95663  
800-568-3958

**Swimco Electric Co.**

753 Camden Avenue  
Campbell, CA 95008  
408-378-2607

**CALIFORNIA****(SOUTHERN)**

**Blue-White Industries**

**(Repair Center)**  
5300 Business Drive  
Huntington Bch. CA 92649  
714-893-8529

**COLORADO****Denver Winpump**

5754 Lamer ave  
.Arvada, CO 80002  
303-424-3551

**CONNECTICUT****Cronin-Cook &  
Associates**

24 West Road  
Vernon, CT 06029  
860-875-0544

**Rice Pump & Motor**

**Repair** 5740 Powerline  
Road  
Ft. Lauderdale FL 33309  
954-776-6049

**American Pump**

7580-A W. Tennessee St.  
Tallahassee, FL 32304  
850-575-9618

**Jerry Lee Chemical Co.**

3407 W. Old Fairfield  
Drive  
Pensacola, FL 32505  
904-432-9929

**Picard Chemical**

1670 S. Congress Avenue  
W. Palm Beach, FL 33406  
561-965-3434

**ILLINOIS****Mullarkey Associates  
(Repair Center)**

8141 W. 185th St.  
Tinley Park, IL 60487  
708-597-5558

**MARYLAND****Century Pool Service,  
Inc**

5020 Nicholson Court,  
#201  
Kensington, MD 20895  
301-231-8999

**NEW YORK****Sherwood Specialties,  
Inc.**

875 Atlantic Ave. 'B'  
Rochester, NY 14609  
585-546-1211

**NORTH CAROLINA****Southern Industrial  
Sales**

1903 Herring Avenue  
Wilson, NC 27893  
800-872-7665

**SOUTH DAKOTA****Son-Aqua Distributing**

Jim Robinson  
2447 W. Main Street  
Rapid City, SD 57702  
605-343-7716

**TENNESSEE****Rock City Machine**

307 3rd Avenue South  
Nashville, TN 37201  
615-244-1371

**TEXAS****Alamo Water Refiners**

13700 Hwy. 90 West  
San Antonio, TX 78245  
210-677-8400

**Shelter's Water Refining**

Robert Shelton  
2708 E. Randol Mill Rd.  
Arlington, TX 76011  
817-640-6188

### LIMITED WARRANTY

Your new pump is a quality product and is warranted to be free of defects as set down in this policy. All parts, including rubberized goods, and labor are covered under warranty for 90 days from the date of purchase. Used peristaltic pump tube assemblies are not warranted. Parts, excluding rubberized goods, are covered under warranty for 12 months from the date of purchase.

Warranty coverage does not include damage to the pump that results from misuse, carelessness, abuse or alteration. Only the repair or the replacement of the pump is covered. Blue-White Industries does not assume responsibility for any other loss or damage.

Warranty status is determined by the pump's serial label and the sales invoice or receipt. The serial label must be on the pump and the pump must be accompanied by the sales invoice or receipt to obtain warranty coverage. The warranty status of the pump will be verified by Blue-White or a factory authorized service center.

Please be advised that although safety tested by independent testing laboratories, Caution - This Pump Has Been Evaluated For Use With Water Only. The Pump has also been tested by NSF International for use with 12-1/2% Sodium Hypochlorite only. ***Installers and operators of these devices must be well informed and aware of the precautions to be taken when injecting various chemicals -especially those considered hazardous or dangerous.***

Should it become necessary to return an injector for repair or service, you must attach information regarding the chemical used as some residue may be present within the unit which could be a hazard to service personnel.

Blue-White Industries will not be liable for any damage that may result by the use of chemicals with their injectors and it's components. Thank you.

### PROCEDURE FOR IN WARRANTY REPAIR

Carefully pack the pump to be repaired. To assist in troubleshooting, please include the foot strainer and injection/check valve fitting if possible. Enclose a brief description of the problem as well as the original invoice or sales receipt showing the date of purchase. The receipt will be returned with the unit. Prepay all shipping costs. COD shipments will not be accepted. Warranty service must be performed by the factory or an authorized service center. Damage caused by improper packaging is the responsibility of the sender.



Users of electrical and electronic equipment (EEE) with the WEEE marking per Annex IV of the WEEE Directive must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to them for the return, recycle, recovery of WEEE and minimize any potential effects of EEE on the environment and human health due to the presence of hazardous substances. The WEEE marking applies only to countries within the European Union (EU) and Norway. Appliances are labeled in accordance with European Directive 2002/96/EC.

Contact your local waste recovery agency for a *Designated Collection Facility* in your area.

***Blue-White***<sup>®</sup>  
***Industries, Ltd.***

5300 Business Drive  
Huntington Beach, CA 92649  
USA

**Phone:** 714-893-8529 **FAX:** 714-894-9492

**E mail:** [sales@blue-white.com](mailto:sales@blue-white.com) or [techsupport@blue-white.com](mailto:techsupport@blue-white.com)

**Website:** [www.blue-white.com](http://www.blue-white.com)